

"PASSER À L'ACTION"

"TAKE ACTION"

Ⓡ **Repose-Pieds**

Ⓡ **Footrest**

Ⓡ **Fußstütze**

Ⓡ **Poggiapiedi**

Ⓡ **Reposapiés**

Ⓡ **Voetensteun**

Ⓡ **Fotstöd**


Ⓡ **Ayak desteği**

Guide d'installation

Installation Guide

Installationsanleitung

Reflexwood

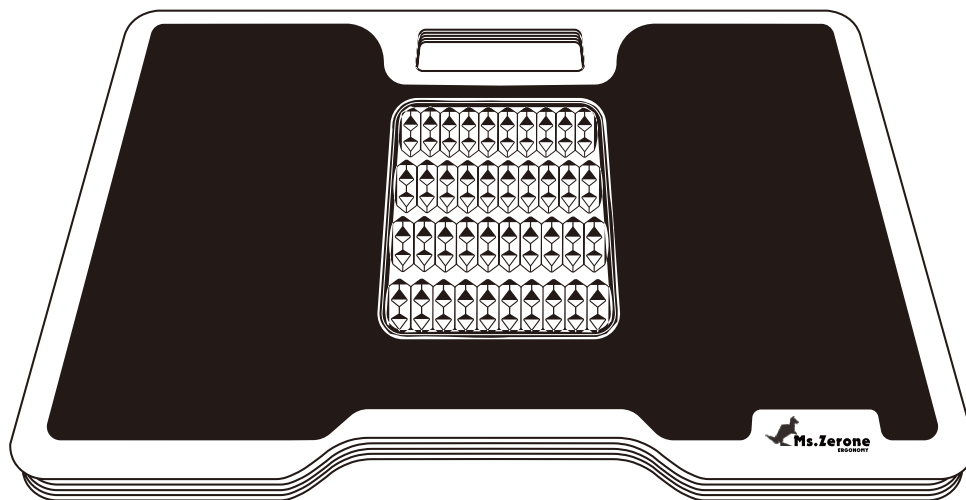


Service

Service Clientele
Customer service
info@mszerone.com
www.mszerone.com

Tenbat

Importé par **TENBAT**
640 Avenue de l'Europe
13760 Saint Cannat
FRANCE


Ergonomic Wooden Footrest

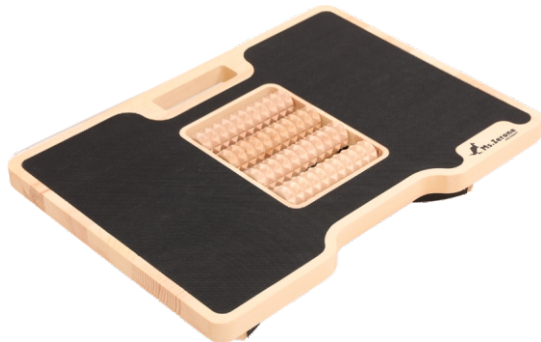

1. Front
(Devant)



2. Back
(Dos)

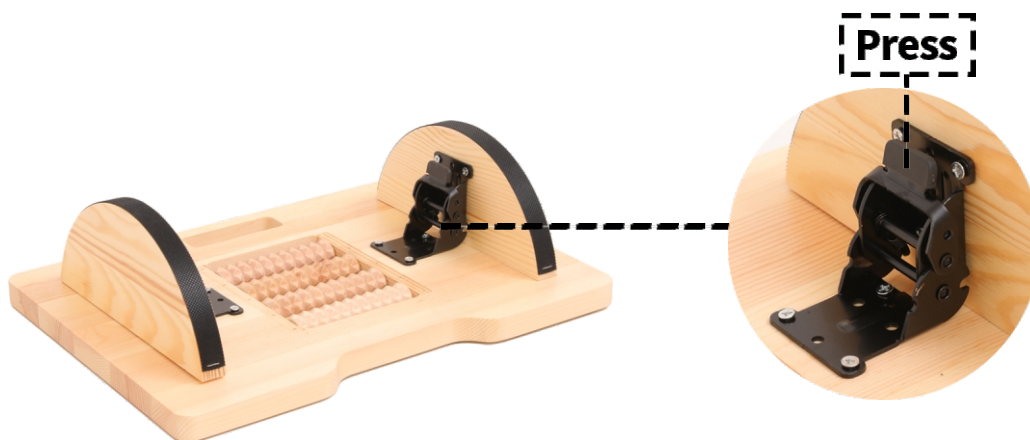

3. Schematic diagram of opening and folding
(Schéma d'ouverture et de pliage)



4. After unfolding
(Après le déroulement)